



Transport
EFFICIENCY

"Running Well for You"



BPW and Jost Ballrace – Greasing intervals - Revised

Ballrace Type	Greasing Interval		
	On highway	Off highway ²	Off highway – Extreme ³
BPW	20,000 km or 2 monthly	Every 2 weeks	Weekly
JOST - Standard	8,000 km or monthly	Every 2 weeks	Weekly
- Low maintenance ¹	300,000 km or 3 years	100,000 km or 1 year	50,000 km or 6 months

Ballraces are shipped with transit grease only (except low maintenance) and have to be fully greased before being put into service.

Grease Type - For both BPW and Jost Ballraces use a Lithium complex grease, consistency class 2 – 3 (BPW ECO-Li plus recommended). 600 grams of grease is required for the initial grease fill and for servicing. After filling with grease a continuous bead of grease must be seen around the circumference of the gaps or rubber dust seals (low maintenance models).

Avoid directing high pressure water or steam jets at bearing gaps or sealing washers. Must be re-greased after intensive cleaning.

Notes:

¹ Has a green type plate. Initial maintenance free period is stated, after this period the ballrace should be greased at the same frequency as the standard type.

² Includes vehicles used on any gravel roads.

³ Logging/Livestock.